







STO300


Outdoor temperature transmitter
 Utomhus temperaturtransmitter
 Außentemperaturmeßumformer
 Convertisseur de sonde de température extérieur
 Transmisor de la temperatura externa
 Trasformatore sensore esterno

0FL-4183-001

Instruction
 Montageanvisning
 Bedienungsanleitung
 Instructions d'installation
 Instrucciones de empleo
 Istruzioni per installazioni

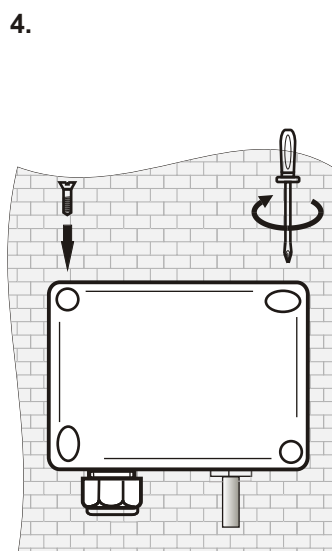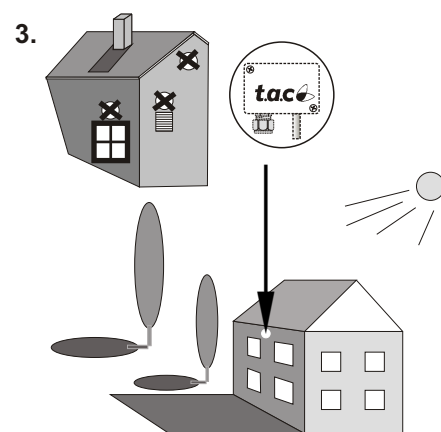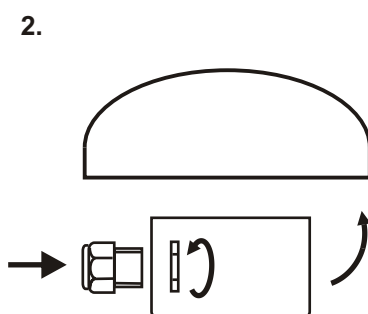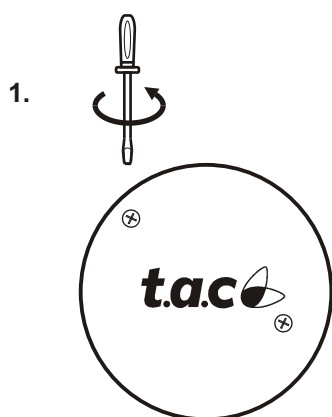

5. 4...20mA

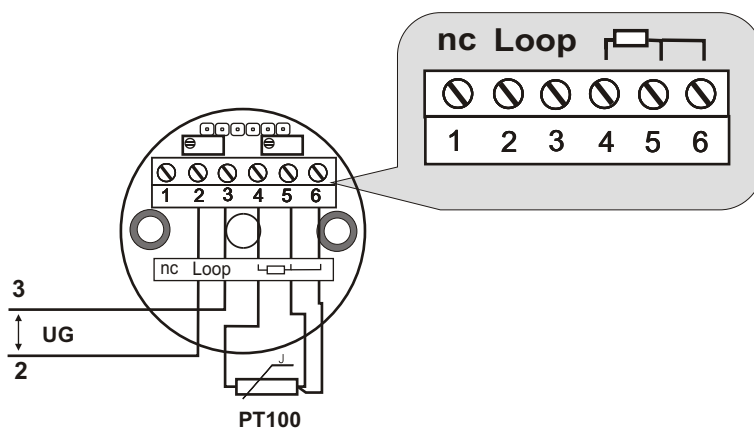

UG=15...36 V DC